

## Other Installation Equipment

Prysmian Part Number: See Individual Descriptions

### Air Pressure Indicator / Valve

Part No. XBFSC00004

Used for controlling the flow of compressed air into the blowing head to enable safe installation of the fibre into the blown fibre tube (the unit is supplied with an on/off valve). The unit also includes a moisture filter.



### Air Flow Meter Kit

Part No. XBFSC00011

Contains a number of connectors that can be used to monitor and control the flow of compressed air through a tube link. The kit includes end-stops ("stones") that allow air through but prevent any solid material being blown from the end of the tube.



### Pan Guide

Part No. XBFSC00043

Located on top of the EPFU pan during installation, the Pan Guide is used to guide the fibre from the pan to the blowing head. The guide also assists in controlling the flow of fibre back into the pan during recovery of the EPFU, so that it can be successfully recycled.



### Pan Inversion Ring

Part No. XBFSC00012

The Pan Inversion Ring is used to transport fibre from one pan to another. It enables a full pan of fibre and an empty pan to be joined together. Once the pans are joined together, they are rotated 180° so that the fibre safely falls into the empty pan.



### Blowing Beads

Part No. XBFSC00001

These beads are fixed to the end of the blown fibre unit before blowing commences. The bead helps the guidance of the blown fibre unit through the blown fibre tube to avoid "snagging" particularly where bends or connectors may be located.



Packs of 1000.

Prysmian Telecom Cables & Systems UK Ltd, Chickenhall Lane, Bishopstoke, Hants SO50 6YU, UK

Technical Enquiries +44 (0) 2380 608760 Fax Number +44 (0) 2380 608769

© PRYSMIAN 2006. All Rights Reserved.

The information contained within this document must not be copied, reprinted or reproduced in any form, either wholly or in part, without the written consent of Prysmian. The information is believed correct at the time of issue. Prysmian reserves the right to amend this specification without notice. This specification is not contractually valid unless specifically authorised by Prysmian.

Issue 01, July 2006  
Ref: SI007-01